



1. Introduction

Thank you for having purchased one of our company digital products and for the trust you place in us regarding your child entertainment. Here are below quick useful instructions for you to eniov the various functions of this funny kids camera. Please read carefully the instructions below before use for optimal and safe camera operation.

2. Product overview

This product is a unique appearance, and easy to carry digital camera, specially designed for children.

3. Precautions

The content of the section gives you recommandations before using this kids camera for proper and safe operation. Please read and follow them carefully.

- Avoid direct light, heat source, dust, moisture. The camera is also vulnerable to vibrations and easy to be blown down by the wind. Do not immerse it in water, shake it or throw it away violently to do not damage the electronic internal system.
- Avoid frequently plugging in and out the camera to external devices (such as charging interfaces, etc.), so as not to cause loose sockets and bad contact to affect the normal camera operating.
- Self-disassembly, repair, transformation are prohibited so as not to cause irreparable damages to the camera. If there is something wrong with the camera, please contact the after sale service for repair
- Keep away from benzene, diluents and other chemicals.
- Do not use it when cycling, driving cars and motorcycles, so as to avoid dangerous situation.


Warning: all packaging materials, such as tape, handles, plastic sheets, binding lines, labels, etc., are not part of the product and are not suitable for children's play. For the safety of your child. please remove and properly dispose of the above packaging materials. Classify and dispose of waste batteries and electronic according to current regulations.

4. Performance parameters

Input power supply: DC DC5V Photo resolution: 0.3 mega pixels Battery capacity: 600 Mah

Screen size: 3.5 inches Video resolution: VGA Product dimensions:117*61*48MM

5. Operating instructions

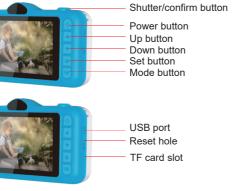

This children camera has photo, preview, video and other functions, you can easily switch to. Please insert TF card having been formatted before use

(1). Photo mode



- Press the [shutter] button to take photos.
- 2. Press the [up and down] buttons to select a color effect filter.
- I. Press the [mode] button to enter the

(2). Video recording mode



- 2 Press the shutter button to start or stop. a video recording. The blue light will flash until the end of the recording and turn off once recording is ended.
- 1. Press the mode button to select the video recording mode

(3). Preview mode



 
- 3. Press the [shutter] button to play or stop video and press again the [mode] button to exit the preview mode.
- 2. Press the [up and down] buttons to select a video file or photo file.
- 1. Press the [mode] button to enter video/photo) preview mode.

(4). Photo frame function



- 1. Press the [mode] button to enter the shooting mode.
- 2. Press [up] button to enter the photo frame function, and press [up and down] buttons to select different photo frames.
- 3 Press [shutter] button to take a picture with the chosen frame.

(5). Setting mode



Settings menu

- select the setting item. 1. Press the [set] button to enter the

| Items | Menu | Description | Function |
|-------|---------------------------------|--|--|
| 1 | Video size | 1080/720P/VGA | Select video output size |
| 2 | Time stamp | On(default)/Off | Time and date display on photo/video |
| 3 | Voice record | On(default)/Off | Video sound |
| 4 | Photo size | 3M/2M/1.3/VGA | Select photo output size |
| 5 | Delete file | Next menu | Choose to delete one single file |
| 6 | Delete all | | Choose to delete all files |
| 7 | Formatting | Cancel(default) /Execute | Format memory card |
| 8 | Language type | English/French/ German/Spanish/ Italian/Portuguese/ Dutch/Polish/ Hungarian/Czech/ Russian/Arabic | Select a language |
| 9 | Automatic screen shutdown | Off / 1 minute (Default) / 3 minutes / 5 minutes | If there is no interaction for a few moments, the camera screen will automatically shut down after 1/3/5 minutes. |
| 10 | Automatic camera shutdown | Off / 1 minute (Default) / 3 minutes / 5 minutes | If there is no interaction for a few moments, the camera will automatically shut down after 1/3/5 minutes. |

| | | 11 | Light frequency. | 50 Hz (Default) | Main European power frequency |
|--|----|---------|---------------------|-----------------------------|--|
| | | | | 60 Hz | Main American power frequency |
| | | 12 | Time setting | | Adjust the year,month, day and time |
| | | 13 | Reset the system | Cancel(Default) /Execute | Restore default settings |
| | 14 | Version | | View system version | |
| | | 15 | USB | PC camera | Use the camera as a video computer device |
| | | | | Disk drive (Default) | Play or transfer files stored on the memory card |
| | | | | | |

(6). Charging

Recharge the camera by either connecting it to a computer with the USB cable or to a power outlet by connecting the USB cable to an AC adapter. The red indicator light stays on for the entire charging time and then turns off when the camera is fully charged.

(7). Connect to the computer

- 1. USB disk function: check that the USB set up in the set tings menu is USB disk and connect the camera to a computer with the USB cable. Then a removable disk window will appear on the computer and the device will enter USB disk mode, so that recorded files can be played or transferred on the computer. You can also take out the memory card and insert it in a card reader to play or transfer saver files.
- 2. PC camera function: check that the USB set up in the setting menu is PC camera and connect the camera to a computer with the USB cable. Then a standard device will appear on the computer, which can be used as a PC camera.

(8). Supports TF cards up to 32GB maximum.

1 year limited warranty / garantie limitée un an / 1 Jahr AgfaPhoto is used under license of Agfa-Gevaert NV. For this product eingeschränkte Garantie / garantía limitada de 1 año / garanzia limitada di 1 anno / garantia limitada de 1 ano / 1 jaar beperkte garantie / roczna ograniczona gwarancja / omezená záruka 1 rok / 1 év korlátozott garancia / 1 год ограниченной гарантии

Product manufactured for and distributed by : GT COMPANY - 5rue de la Galmy - 77700 Chessy - France -

+33 (0) 1.61.10.09.25 - www.gtcompany.fr

Made in China



Notice of compliance for the European Union Products bearing the CE mark comply with the applicable European directives and associated harmonised European

Disposal of waste equipment by users in the European

This symbol means that according to local laws and regulations it is prohibited to dispose of this product with household waste. Instead, it is your responsibility to protect the environment and human health by handing over your used device to a designated collection point for the recycling of waste electrical and electronic equipment. For more information about where you can drop off your waste equipment for recycling ,please contact your local city office your household waste disposal service or the shop where you purchased the product.

a sub-license has been granted by AgfaPhoto Holding GmbH (www.agfaphoto.com). Neither Agfa-Gevaert NV nor AgfaPhoto Holding GmbH manufacture this product or provide any product warranty or support. For service, support and warranty information contact the distributor or manufacturer. After sales service / service après vente / Kundendienst

/ servicio postventa / servizio post-vendita / serviço pós venda / dienst na verkoop / serwis posprzedażowy / poprodejní servis / értékesítés utáni szolgáltatás / Послепродажное обслуживание :

@: aftersaleservice@gtcompany.fr **2**: + 33 (0) 1.85.49.10.26





WARNING! Not suitable for children under 36 months. Small parts and long cord. Choking and strangulation hazards